

# **RECONSTITUTED VENEER (ENGINEERED VENEER)**

**C&D MATERIALS LIMITED**

**“We, C&D MATERIALS LIMITED is dedicated to satisfy our customers by providing high quality products , best services and promptly delivering”.**



# Index

- |           |                         |           |                        |
|-----------|-------------------------|-----------|------------------------|
| <b>1</b>  | <b>Oak Veneer</b>       | <b>13</b> | <b>Maple Veneer</b>    |
| <b>2</b>  | <b>Walnut Veneer</b>    | <b>14</b> | <b>Makore Veneer</b>   |
| <b>3</b>  | <b>Ash Veneer</b>       | <b>15</b> | <b>Padauk Veneer</b>   |
| <b>4</b>  | <b>Teak Veneer</b>      | <b>16</b> | <b>Apricot Veneer</b>  |
| <b>5</b>  | <b>Ebony Veneer</b>     | <b>17</b> | <b>Elm Veneer</b>      |
| <b>6</b>  | <b>Wenge Veneer</b>     | <b>18</b> | <b>Pearl Veneer</b>    |
| <b>7</b>  | <b>Qiuxiang Veneer</b>  | <b>19</b> | <b>Lacewood Veneer</b> |
| <b>8</b>  | <b>Rosewood Veneer</b>  | <b>20</b> | <b>Burlwood Veneer</b> |
| <b>9</b>  | <b>Zebrawood Veneer</b> | <b>21</b> | <b>Exotic Veneer</b>   |
| <b>10</b> | <b>Cherry Veneer</b>    |           |                        |
| <b>11</b> | <b>Sapele Veneer</b>    |           |                        |
| <b>12</b> | <b>Bubinga Veneer</b>   |           |                        |

## Oak Veneer



White Oak C/C



Red Oak C/C



Yellow Oak Q/C



Black Oak Q/C



Chinese Oak C/C



Gray Oak Q/C

### How to choose and specify oak engineered veneer

- 1
- 2
- 3
- 4
- 5

|                 |  |
|-----------------|--|
| Wood species :  | Red Oak, White Oak, Yellow Oak, Black Oak, Chinese Oak, Gray Oak |
| Grains :        | Quarter, Flat cut (Crown cut),                                   |
| Width (mm):     | 320mm, 640mm, 1280mm   |
| Length (mm):    | 2000mm, 2200mm, 2500mm, 2800mm, 3000mm, 3400mm                   |
| Thickness (mm): | 0.2mm, 0.3mm, 0.35mm, 0.4mm, 0.5mm, 0.6mm, 0.9mm, 1.0mm          |





# Walnut Veneer



Walnut C/C



Walnut Q/C



Walnut C/C



Walnut Q/C



Walnut N



Walnut C/C

## How to choose and specify walnut engineered veneer

- |   |                 |   |
|---|-----------------|---|
| 1 | Wood species :  | Black walnut, Copy natural walnut, Dark walnut, Washed walnut |
| 2 | Grains :        | Quarter, Flat cut (Crown cut),                                |
| 3 | Width (mm):     | 320mm, 640mm, 1280mm  |
| 4 | Length (mm):    | 2000mm, 2200mm, 2500mm, 2800mm, 3000mm, 3400mm                |
| 5 | Thickness (mm): | 0.2mm, 0.3mm, 0.35mm, 0.4mm, 0.5mm, 0.6mm, 0.9mm, 1.0mm       |



## Ash Veneer



White Ash Q/C



Ash Q/C



Ash Q/C



Chinese Ash Q/C



Chinese Ash C/C



SQL C/C

### How to choose and specify ash engineered veneer

1

Wood species : White Ash, Ash, Chinese Ash, Fine line Ash

2

Grains : Quarter, Flat cut (Crown cut),

3

Width (mm): 320mm, 640mm, 1280mm

4

Length (mm): 2000mm, 2200mm, 2500mm, 2800mm, 3000mm, 3400mm

5

Thickness (mm): 0.2mm, 0.3mm, 0.35mm, 0.4mm, 0.5mm, 0.6mm, 0.9mm, 1.0mm





# Teak Veneer



Teak Q/C



Golden Teak Q/C



Burma Teak Q/C



Burma Teak Q/C



Teak C/C



Burma Teak C/C

## How to choose and specify teak engineered veneer

- 1
- 2
- 3
- 4
- 5


|                 |   |
|-----------------|---|
| Wood species :  | Teak, Burma Teak, Golden Teak, Africa Teak              |
| Grains :        | Quarter, Flat cut (Crown cut),                          |
| Width (mm):     | 320mm, 640mm, 1280mm                                    |
| Length (mm):    | 2000mm, 2200mm, 2500mm, 2800mm, 3000mm, 3400mm          |
| Thickness (mm): | 0.2mm, 0.3mm, 0.35mm, 0.4mm, 0.5mm, 0.6mm, 0.9mm, 1.0mm |




# Ebony Veneer



Ebony Q/C

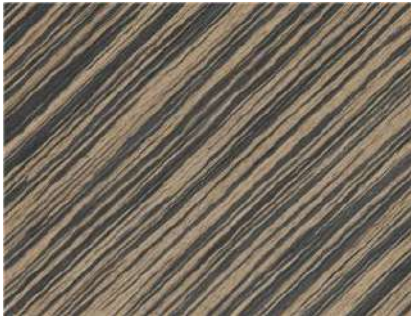


Ebony Q/C

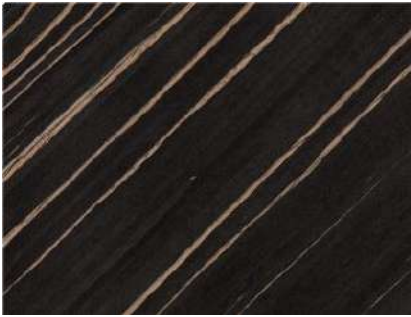

Ebony Q/C



Ebony Q/C

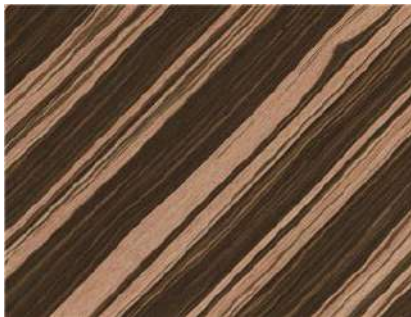

Ebony N



Ebony C/C

## How to choose and specify ebony engineered veneer

- 1
- 2
- 3
- 4
- 5

Wood species : Ebony, Macassar ebony, Amara ebony

Grains : Quarter, Flat cut (Crown cut),

Width (mm): 320mm, 640mm, 1280mm

Length (mm): 2000mm, 2200mm, 2500mm, 2800mm, 3000mm, 3400mm

Thickness (mm): 0.2mm, 0.3mm, 0.35mm, 0.4mm, 0.5mm, 0.6mm, 0.9mm, 1.0mm





# Wenge Veneer



Wenge Q/C



Wenge Q/C



Wenge Q/C



Wenge Q/C



Wenge C/C



Wenge N

## How to choose and specify our wenge engineered veneer

- 1
- 2
- 3
- 4
- 5

|                 |   |
|-----------------|---|
| Wood species :  | Wenge   |
| Grains :        | Quarter, Fine line, Flat cut (Crown cut),               |
| Width (mm):     | 320mm, 640mm, 1280mm                                    |
| Length (mm):    | 2000mm, 2200mm, 2500mm, 2800mm, 3000mm, 3400mm          |
| Thickness (mm): | 0.2mm, 0.3mm, 0.35mm, 0.4mm, 0.5mm, 0.6mm, 0.9mm, 1.0mm |





## Qiuxiang Veneer



Washed Qiuxiang Q/C



Washed Qiuxiang Q/C



Qiuxiang Q/C



Washed Qiuxiang C/C



Washed Qiuxiang C/C



Washed Qiuxiang C/C

### How to choose and specify qiuxiang engineered veneer

1

Wood species : Qiuxiang, Washed Qiuxiang

2

Grains : Quarter, Flat cut (Crown cut),

3

Width (mm): 320mm, 640mm, 1280mm

4

Length (mm): 2000mm, 2200mm, 2500mm, 2800mm, 3000mm, 3400mm

5

Thickness (mm): 0.2mm, 0.3mm, 0.35mm, 0.4mm, 0.5mm, 0.6mm, 0.9mm, 1.0mm



# Rosewood Veneer



Rosewood C/C



Rosewood Q/C



Rosewood C/C



Rosewood C/C



Rosewood C/C



Rosewood Q/C

## How to choose and specify rosewood engineered veneer

- 1
- 2
- 3
- 4
- 5

|                 |   |
|-----------------|---|
| Wood species :  | Zebrawood   |
| Grains :        | Quarter, Flat cut (Crown cut),                          |
| Width (mm):     | 320mm, 640mm, 1280mm                                    |
| Length (mm):    | 2000mm, 2200mm, 2500mm, 2800mm, 3000mm, 3400mm          |
| Thickness (mm): | 0.2mm, 0.3mm, 0.35mm, 0.4mm, 0.5mm, 0.6mm, 0.9mm, 1.0mm |





# Zebrawood Veneer



Zebrawood Q/C



Zebrawood Q/C



Zebrawood Q/C



Zebrawood Q/C



Zebrawood Q/C



Zebrawood Q/C

## How to choose and specify zebrawood engineered veneer

- 1
- 2
- 3
- 4
- 5

|                 |   |
|-----------------|---|
| Wood species :  | Zebrawood   |
| Grains :        | Quarter, Flat cut (Crown cut),                          |
| Width (mm):     | 320mm, 640mm, 1280mm                                    |
| Length (mm):    | 2000mm, 2200mm, 2500mm, 2800mm, 3000mm, 3400mm          |
| Thickness (mm): | 0.2mm, 0.3mm, 0.35mm, 0.4mm, 0.5mm, 0.6mm, 0.9mm, 1.0mm |



## Cherry Veneer



Cherry C/C



Cherry C/C



Cherry Q/C



Cherry Q/C



Cherry C/C



Cherry Q/C

### How to choose and specify cherry engineered veneer

1

Wood species : Cherry

2

Grains : Quarter, Flat cut (Crown cut),

3

Width (mm): 320mm, 640mm, 1280mm

4

Length (mm): 2000mm, 2200mm, 2500mm, 2800mm, 3000mm, 3400mm

5

Thickness (mm): 0.2mm, 0.3mm, 0.35mm, 0.4mm, 0.5mm, 0.6mm, 0.9mm, 1.0mm





## Sapele Veneer



Sapele Q/C



Sapele C/C



Sapele Q/C



Sapele C/C

### How to choose and specify sapele engineered veneer

1

Wood species : Sapele

2

Grains : Quarter, Flat cut (Crown cut),

3

Width (mm): 320mm, 640mm, 1280mm

4

Length (mm): 2000mm, 2200mm, 2500mm, 2800mm, 3000mm, 3400mm


5

Thickness (mm): 0.2mm, 0.3mm, 0.35mm, 0.4mm, 0.5mm, 0.6mm, 0.9mm, 1.0mm

## Bubinga Veneer



Bubinga Q/C

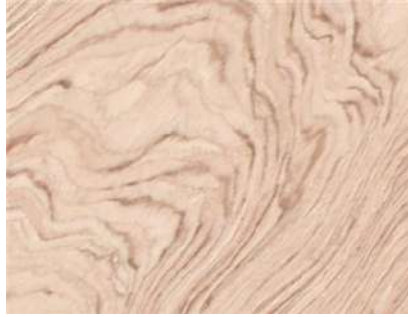

Bubinga C/C



Bubinga Q/C



Bubinga C/C



Bubinga C/C



Bubinga N/C

### How to choose and specify bubinga engineered veneer

1

Wood species : Bubinga, Bubinga burl

2

Grains : Quarter, Flat cut (Crown cut),

3

Width (mm): 320mm, 640mm, 1280mm

4

Length (mm): 2000mm, 2200mm, 2500mm, 2800mm, 3000mm, 3400mm

5

Thickness (mm): 0.2mm, 0.3mm, 0.35mm, 0.4mm, 0.5mm, 0.6mm, 0.9mm, 1.0mm





## Maple Veneer



Maple C/C



Maple Q/C

### How to choose and specify maple engineered veneer

1

Wood species : Maple

2

Grains : Quarter, Flat cut (Crown cut),

3

Width (mm): 320mm, 640mm, 1280mm

4

Length (mm): 2000mm, 2200mm, 2500mm, 2800mm, 3000mm, 3400mm

5

Thickness (mm): 0.2mm, 0.3mm, 0.35mm, 0.4mm, 0.5mm, 0.6mm, 0.9mm, 1.0mm



## Makore Veneer



Makore Q/C



Makore C/C



Makore Q/C



Makore Q/C

### How to choose and specify makore engineered veneer

1

Wood species : Makore

2

Grains : Quarter,

3

Width (mm): 320mm, 640mm, 1280mm

4

Length (mm): 2000mm, 2200mm, 2500mm, 2800mm, 3000mm, 3400mm

5

Thickness (mm): 0.2mm, 0.3mm, 0.35mm, 0.4mm, 0.5mm, 0.6mm, 0.9mm, 1.0mm



## Padauk Veneer



Padauk Q/C



Padauk C/C



Padauk Q/C



Padauk C/C



Padauk Q/C



Padauk Q/C

### How to choose and specify padauk engineered veneer

1

Wood species : Padauk

2

Grains : Quarter, Flat cut (Crown cut),

3

Width (mm): 320mm, 640mm, 1280mm

4


Length (mm): 2000mm, 2200mm, 2500mm, 2800mm, 3000mm, 3400mm

5

Thickness (mm): 0.2mm, 0.3mm, 0.35mm, 0.4mm, 0.5mm, 0.6mm, 0.9mm, 1.0mm



## Apricot Veneer

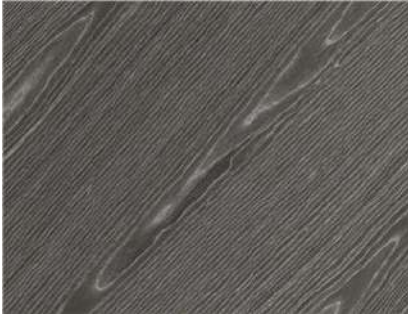

Apricot C/C



Apricot Q/C



Apricot C/C



Apricot Q/C



Apricot Q/C



Apricot C/C

### How to choose and specify apricot engineered veneer

1

Wood species : White Apricot, Black Apricot, Silver Apricot

2

Grains : Quarter, Flat cut (Crown cut),

3

Width (mm): 320mm, 640mm, 1280mm

4

Length (mm): 2000mm, 2200mm, 2500mm, 2800mm, 3000mm, 3400mm

5

Thickness (mm): 0.2mm, 0.3mm, 0.35mm, 0.4mm, 0.5mm, 0.6mm, 0.9mm, 1.0mm





# Elm Veneer



Elm Q/C



Elm Q/C



Elm C/C



Elm Q/C



Elm Q/C




Elm C/C

## How to choose and specify elm engineered veneer


- 1
- 2
- 3
- 4
- 5

|                 |   |
|-----------------|---|
| Wood species :  | Elm   |
| Grains :        | Quarter, Flat cut (Crown cut),                          |
| Width (mm):     | 320mm, 640mm, 1280mm                                    |
| Length (mm):    | 2000mm, 2200mm, 2500mm, 2800mm, 3000mm, 3400mm          |
| Thickness (mm): | 0.2mm, 0.3mm, 0.35mm, 0.4mm, 0.5mm, 0.6mm, 0.9mm, 1.0mm |

# Pearl Veneer

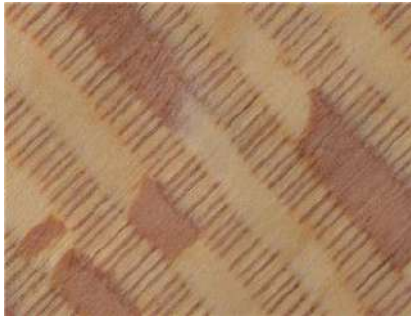

Pearl N

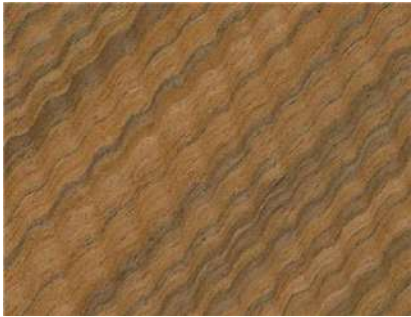

Pearl N



Pearl N



Pearl N



Pearl N



Pearl N

## How to choose and specify pearl engineered veneer

- 1
- 2
- 3
- 4
- 5

|                 |   |
|-----------------|---|
| Wood species :  | Pearl   |
| Grains :        | Quarter   |
| Width (mm):     | 320mm, 640mm, 1280mm                                    |
| Length (mm):    | 2000mm, 2200mm, 2500mm, 2800mm, 3000mm, 3400mm          |
| Thickness (mm): | 0.2mm, 0.3mm, 0.35mm, 0.4mm, 0.5mm, 0.6mm, 0.9mm, 1.0mm |






## Lacewood Veneer



Lacewood N



Lacewood C/C

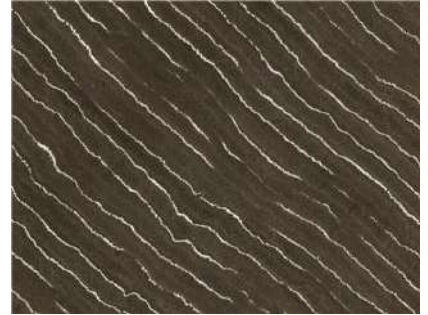

Lacewood N



Lacewood Q/C



Lacewood N



Lacewood N

### How to choose and specify lacewood engineered veneer

1

Wood species : Lacewood

2

Grains : Quarter, Flat cut (Crown cut),

3

Width (mm): 320mm, 640mm, 1280mm

4

Length (mm): 2000mm, 2200mm, 2500mm, 2800mm, 3000mm, 3400mm

5

Thickness (mm): 0.2mm, 0.3mm, 0.35mm, 0.4mm, 0.5mm, 0.6mm, 0.9mm, 1.0mm




# Burlwood Veneer



Burl N



Burl N

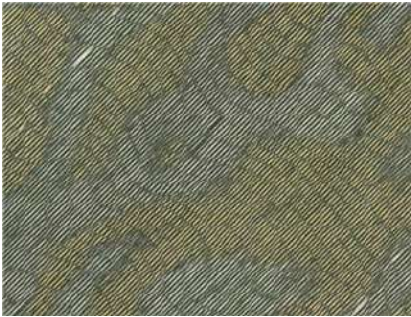

Burl N



Burl N



Burl N



Burl N

## How to choose and specify burlwood engineered veneer

- 1
- 2
- 3
- 4
- 5

|                 |   |
|-----------------|---|
| Wood species :  | Burlwood  |
| Grains :        | Flat cut  |
| Width (mm):     | 320mm, 640mm, 1280mm                                    |
| Length (mm):    | 2000mm, 2200mm, 2500mm, 2800mm, 3000mm, 3400mm          |
| Thickness (mm): | 0.2mm, 0.3mm, 0.35mm, 0.4mm, 0.5mm, 0.6mm, 0.9mm, 1.0mm |






## Exotic Veneer



Exotic Q/C



Olive N

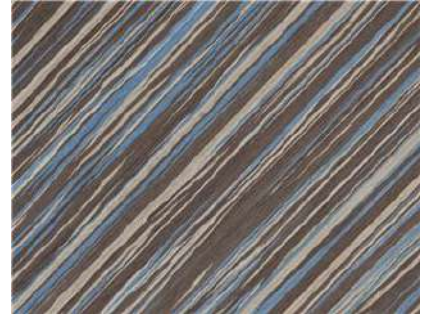


Exotic Q/C



Exotic Q/C



Exotic Burl

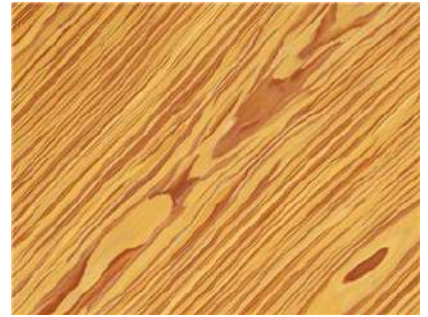

Exotic Tulip

### How to choose and specify exotic engineered veneer

- 1
- 2
- 3
- 4
- 5

Wood species : Exotic

Grains : Quarter, Flat cut (Crown cut), Burl

Width (mm): 320mm, 640mm, 1280mm

Length (mm): 2000mm, 2200mm, 2500mm, 2800mm, 3000mm, 3400mm

Thickness (mm): 0.2mm, 0.3mm, 0.35mm, 0.4mm, 0.5mm, 0.6mm, 0.9mm, 1.0mm





Fully integrated wood veneer products supplier

- Reconstituted Veneer (Engineered Veneer)
- Natural Wood Veneer
- Paper/Fleece Backed Veneer
- Woven Veneer
- Veneer Edge Banding
- Veneered Panels



## C&D Materials Limited

No.288,Dongzhi St, Luoshe, Huzhou, Zhejiang, 313200 CHINA

TEL: + 86-572-822-9896

MOB: + 86-139-8980-6466

Email : [sales@woodenave.com](mailto:sales@woodenave.com)

Website : [www.woodenave.com](http://www.woodenave.com)